 
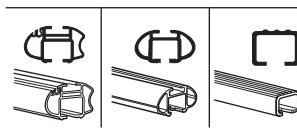 


Kit 1477

 
 
MITSUBISHI Lancer, 4-dr Sedan, 08–

MITSUBISHI Lancer, 5-dr Hatchback, 08–



480R
754

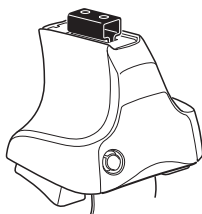

480

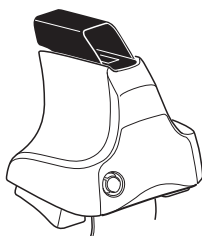

750

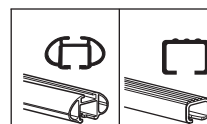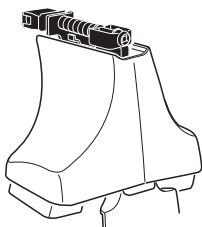  


THULE[®]
SWEDEN


ISO 11154-E

| | | | | |
|----|----|----|----|----|
| | | | | |
| x2 | x2 | x2 | x2 | x2 |
| x2 | | x2 | x2 | |
| x2 | | x4 | x4 | |
| x4 | | x4 | | |


 
Kit

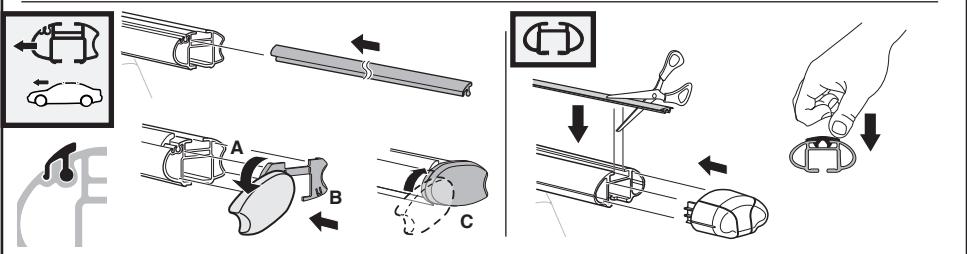

3

 



754

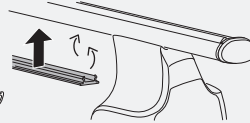  


750



  1

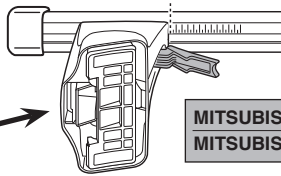


2

 


| | X | |
|--|------|--|
| MITSUBISHI Lancer, 4-dr Sedan, 08- | 37,5 | |
| MITSUBISHI Lancer, 5-dr Hatchback, 08- | 37,5 | |

 1

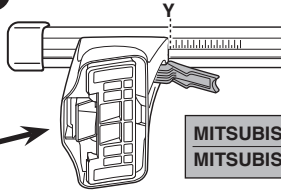

2

 

| | Y | |
|--|----|--|
| MITSUBISHI Lancer, 4-dr Sedan, 08- | 33 | |
| MITSUBISHI Lancer, 5-dr Hatchback, 08- | 33 | |

 


480R




480

1




2

 


| | X inch | X mm |
|--|----------------------------------|---------|
| MITSUBISHI Lancer, 4-dr Sedan, 08- | 40 ³ / ₈ " | 1026 mm |
| MITSUBISHI Lancer, 5-dr Hatchback, 08- | 40 ³ / ₈ " | 1026 mm |

 1










2

 


| | Y inch | Y mm |
|--|----------------------------------|--------|
| MITSUBISHI Lancer, 4-dr Sedan, 08- | 38 ⁵ / ₈ " | 981 mm |
| MITSUBISHI Lancer, 5-dr Hatchback, 08- | 38 ⁵ / ₈ " | 981 mm |

4

      
 
MITSUBISHI Lancer, 4-dr Sedan, 08-
 MITSUBISHI Lancer, 5-dr Hatchback, 08-

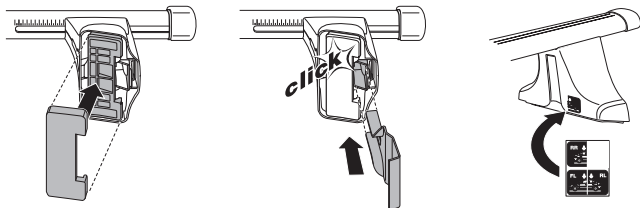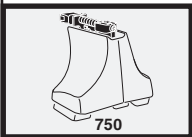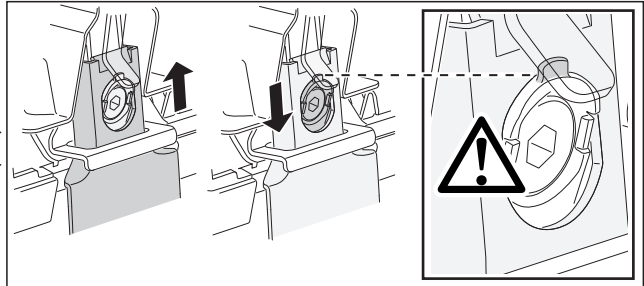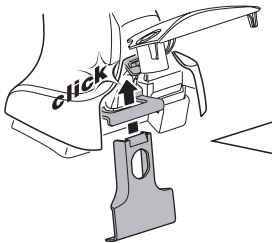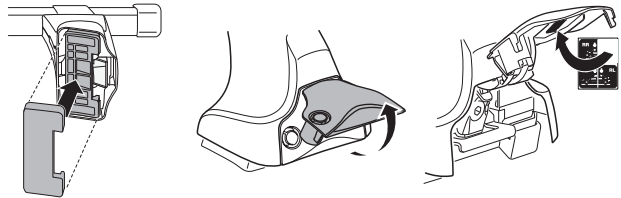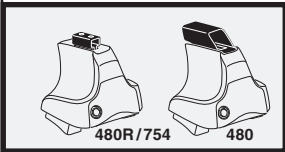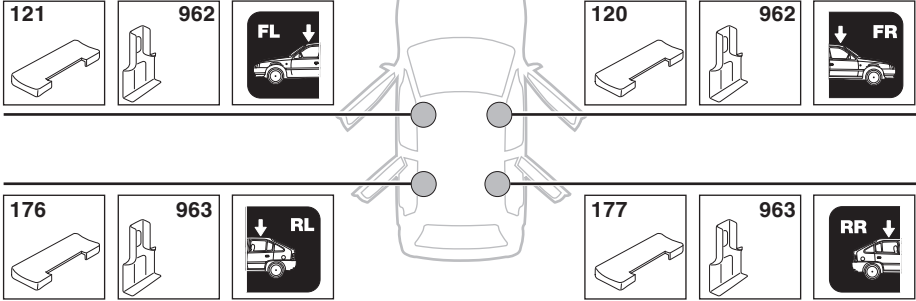

5

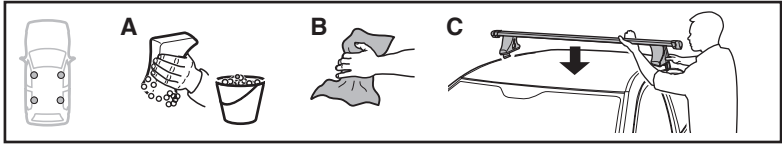 

| | X mm | Y mm | X inch | Y inch |
|--|--------|--------|----------------------------------|----------------------------------|
| MITSUBISHI Lancer, 4-dr Sedan, 08- | 265 mm | 715 mm | 10 ³ / ₈ " | 28 ¹ / ₈ " |
| MITSUBISHI Lancer, 5-dr Hatchback, 08- | 265 mm | 715 mm | 10 ³ / ₈ " | 28 ¹ / ₈ " |

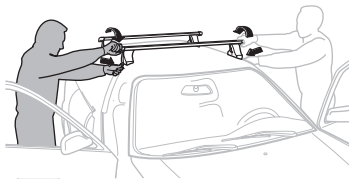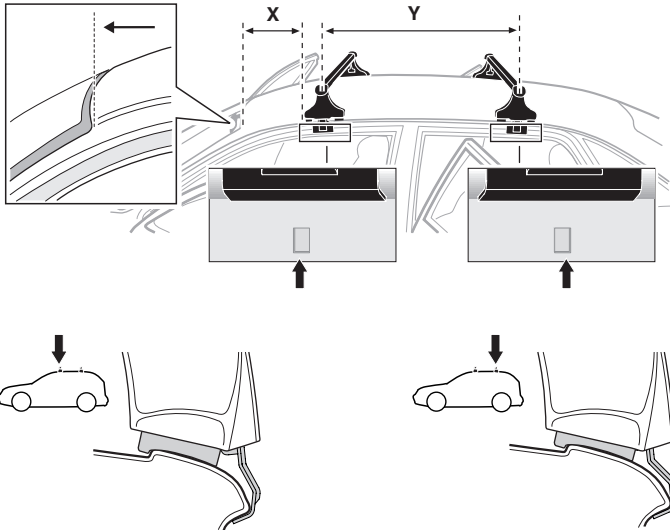  

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Serrare alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pielvelciēt pamīšus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťta bagażníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชั้้นโน้บแบบสลับ

 
 
 
 
 
 
6

 


480R/754



480

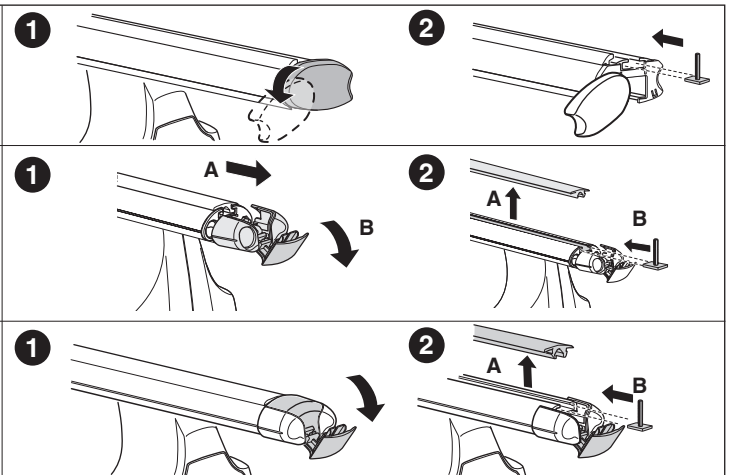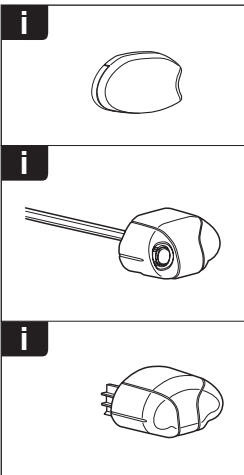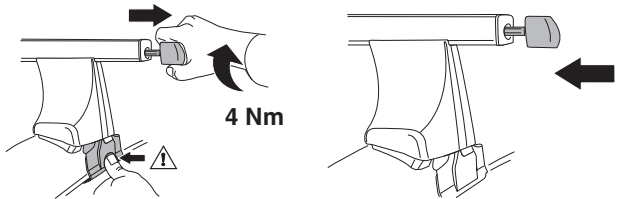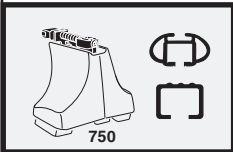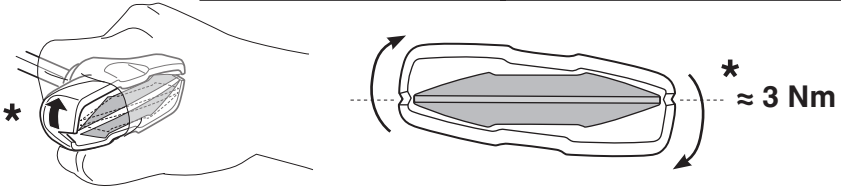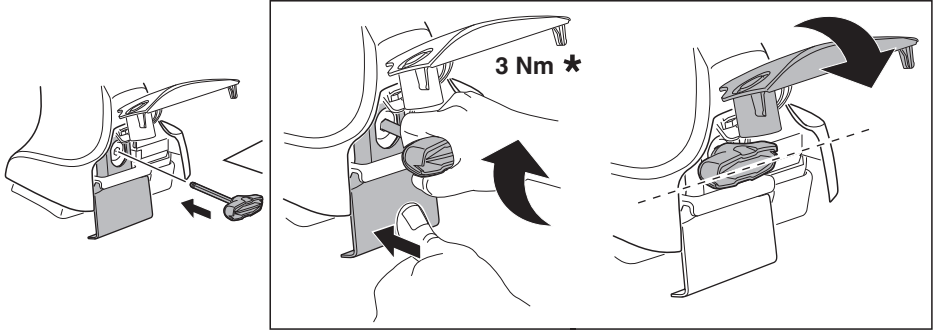

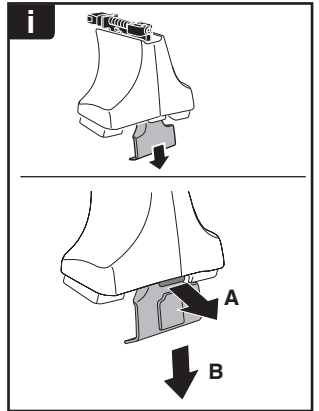

THULE
SWEDEN
**ONE
KEY
SYSTEM**



- 544 (x4)
- 596 (x6)
- 588 (x8)
- NA 510 (x10)
- EUR 452 (x12)
- ASIA



WW ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
 NA ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com
 customer.service@thule.com

www.thule.com