

# Kit 1184

**CITROËN Berlingo**, 3-dr Van, 97-02, 03-08



**CITROËN Xsara Picasso**, 5-dr MPV, 00-03, 04-06\*

**PEUGEOT Partner**, 3/4/5-dr Van, 97-02, 03-08



**PEUGEOT Ranch**, 3/4/5-dr Van, 97-02, 03-08

\* without sunroof



480R  
754

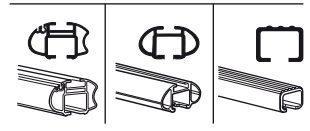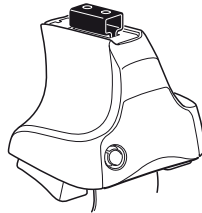

480








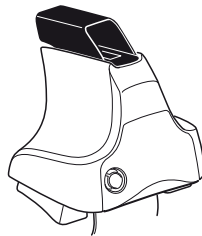


750

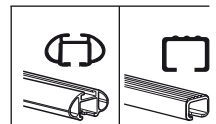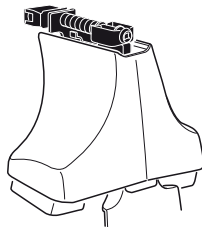


**THULE**<sup>®</sup>  
SWEDEN



**Kit**

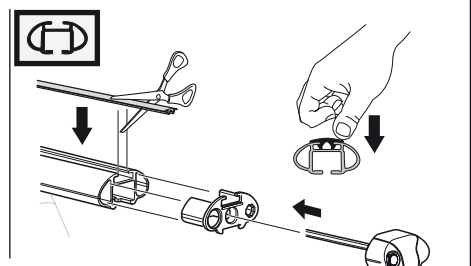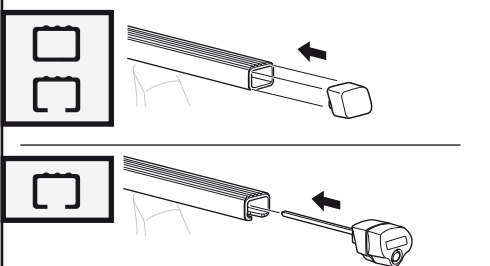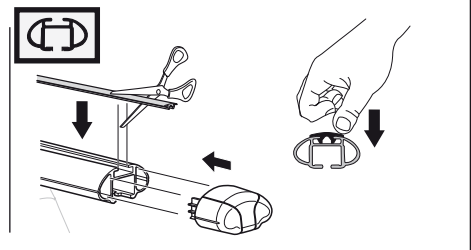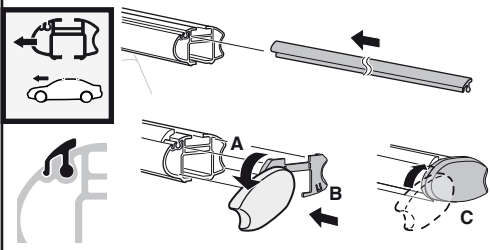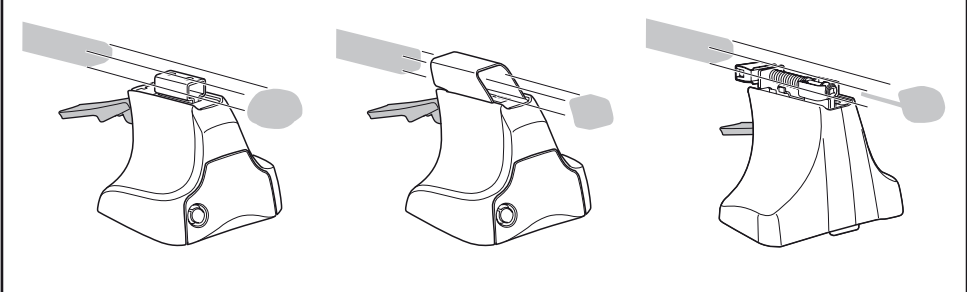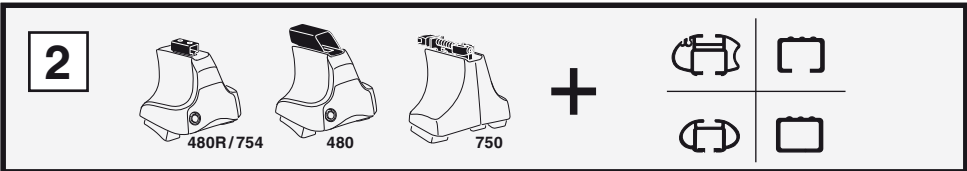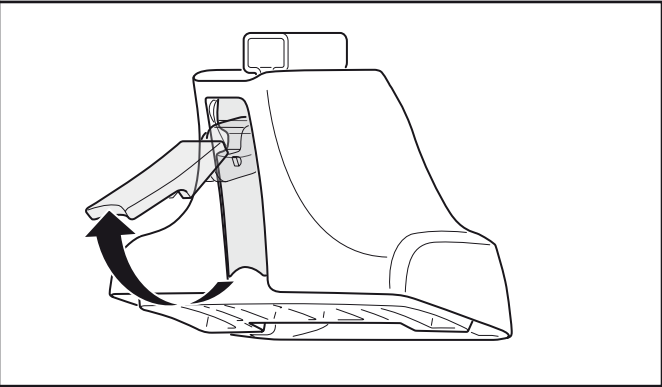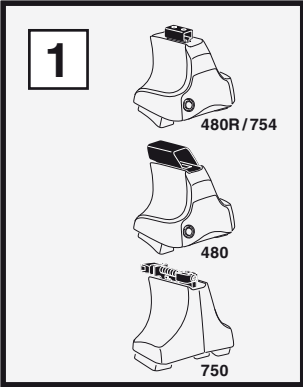

**3**





754

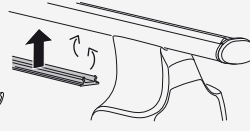


750

**1**

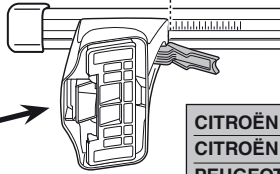



**2**




**X**

<b>CITROËN Berlingo, 3-dr Van, 97-02, 03-08</b>	<b>23,5</b>
<b>CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06</b>	<b>21</b>
<b>PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08</b>	<b>23,5</b>
<b>PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08</b>	<b>23,5</b>

**1**

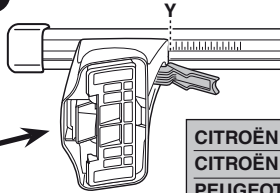

**2**



**Y**

<b>CITROËN Berlingo, 3-dr Van, 97-02, 03-08</b>	<b>24</b>
<b>CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06</b>	<b>20</b>
<b>PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08</b>	<b>24</b>
<b>PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08</b>	<b>24</b>




480R




480

**1**



**2**




**X inch**


**X mm**

<b>CITROËN Berlingo, 3-dr Van, 97-02, 03-08</b>	<b>34 <sup>7</sup>/<sub>8</sub> "</b>	<b>886 mm</b>
<b>CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06</b>	<b>33 <sup>7</sup>/<sub>8</sub> "</b>	<b>861 mm</b>
<b>PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08</b>	<b>34 <sup>7</sup>/<sub>8</sub> "</b>	<b>886 mm</b>
<b>PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08</b>	<b>34 <sup>7</sup>/<sub>8</sub> "</b>	<b>886 mm</b>

**1**



**2**



**Y inch**

**Y mm**

<b>CITROËN Berlingo, 3-dr Van, 97-02, 03-08</b>	<b>35 <sup>1</sup>/<sub>8</sub> "</b>	<b>891 mm</b>
<b>CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06</b>	<b>33 <sup>1</sup>/<sub>2</sub> "</b>	<b>851 mm</b>
<b>PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08</b>	<b>35 <sup>1</sup>/<sub>8</sub> "</b>	<b>891 mm</b>
<b>PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08</b>	<b>35 <sup>1</sup>/<sub>8</sub> "</b>	<b>891 mm</b>








# 4

CITROËN Berlingo, 3-dr Van, 97-02, 03-08


CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06

PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08





PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08

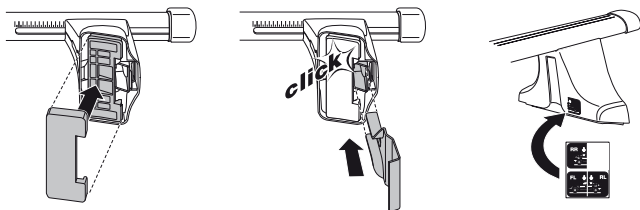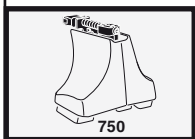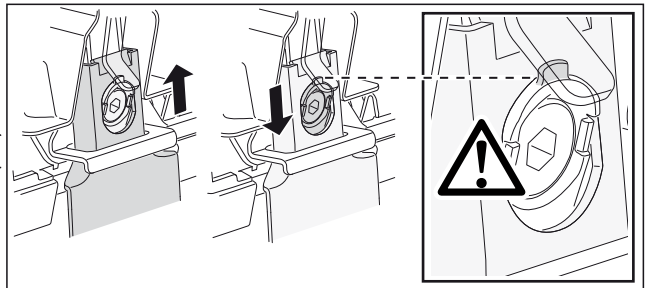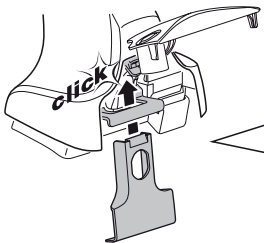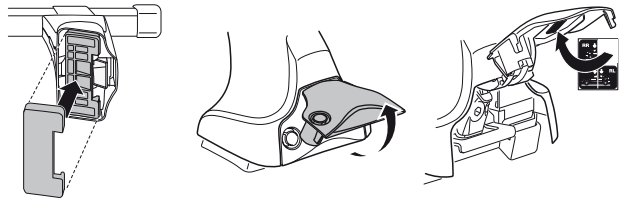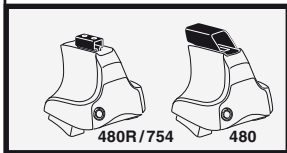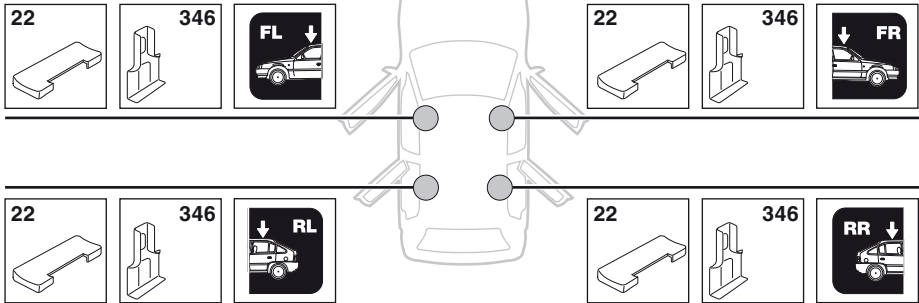

5

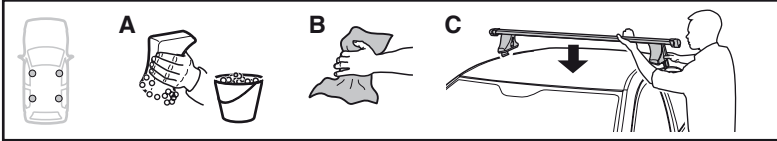

	X mm	Y mm	X inch	Y inch
<b>CITROËN Berlingo</b> , 3-dr Van, 97-02, 03-08	770 mm	600 mm	30 <sup>3</sup> / <sub>8</sub> "	23 <sup>5</sup> / <sub>8</sub> "
<b>CITROËN Xsara Picasso</b> , 5-dr MPV, 00-03, 04-06	320 mm	700 mm	12 <sup>5</sup> / <sub>8</sub> "	27 <sup>1</sup> / <sub>2</sub> "
<b>PEUGEOT Partner</b> , 3/4/5-dr Van, 97-02, 03-08	770 mm	600 mm	30 <sup>3</sup> / <sub>8</sub> "	23 <sup>5</sup> / <sub>8</sub> "
<b>PEUGEOT Ranch</b> , 3/4/5-dr Van, 97-02, 03-08	770 mm	600 mm	30 <sup>3</sup> / <sub>8</sub> "	23 <sup>5</sup> / <sub>8</sub> "

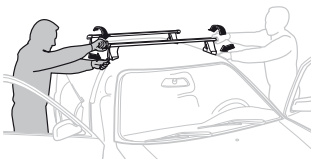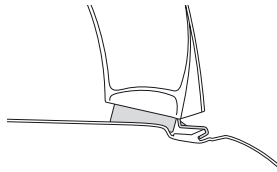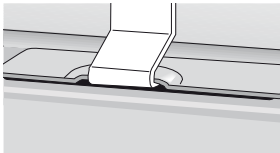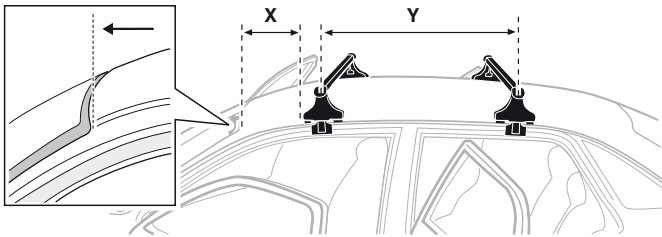

- |              |                                                         |            |                                                      |
|--------------|---------------------------------------------------------|------------|------------------------------------------------------|
| <b>GB/US</b> | Tighten alternately                                     | <b>CZ</b>  | Pokřetla багажника dokřečaj dokřečaj naprziemiennie. |
| <b>D</b>     | Die Schrauben abwechselnd anziehen                      | <b>SK</b>  | Dofahujte striedavo                                  |
| <b>F</b>     | Serrer alternativement chaque côté                      | <b>SLO</b> | Privijajte izmenično.                                |
| <b>NL</b>    | Afwisselend aan de linker- en de rechterkant aandraaien | <b>HR</b>  | Naizmjenično zategnite                               |
| <b>I</b>     | Alternare il serraggio delle viti                       | <b>HU</b>  | Egymástól függetlenül szorítandó                     |
| <b>E</b>     | Apretar alternativamente                                | <b>GR</b>  | Σφιγίγστε εναλλάξ                                    |
| <b>PT</b>    | Aperte alternadamente                                   | <b>TR</b>  | Dönüşümlü sıkın                                      |
| <b>S</b>     | Dra åt växelvis                                         | <b>中文</b>  | 交替拧紧                                                 |
| <b>FIN</b>   | Kierrä vuorotellen                                      | <b>한국어</b> | 빈갈아 가며 조이십시오.                                        |
| <b>EST</b>   | Pinguldage vaheldumisi                                  | <b>日本語</b> | 交互に締め付けてください。                                        |
| <b>LAT</b>   | Pielvelciet pamišus                                     | <b>ไทย</b> | ขันในแบบสลับ                                         |
| <b>LIT</b>   | Užsukinėkite pakaitomis                                 |            |                                                      |
| <b>PL</b>    | Śruby dokręcaj naprzemiennie                            |            |                                                      |
| <b>RU</b>    | Затягивайте попеременно                                 |            |                                                      |




6











480R/754








480

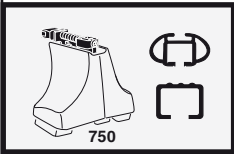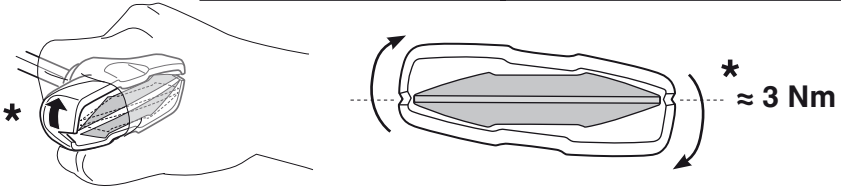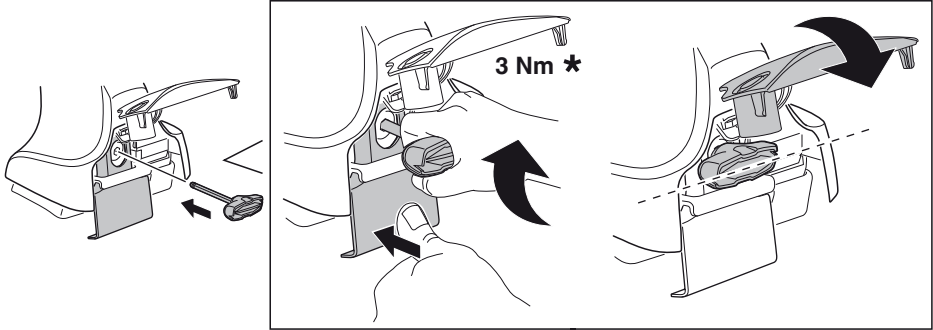


750

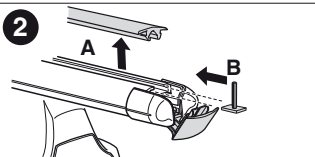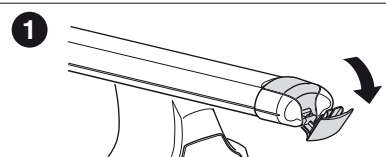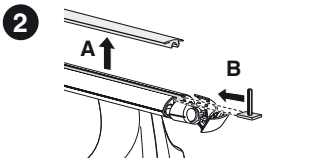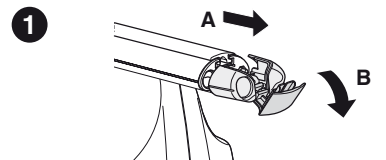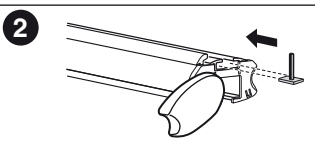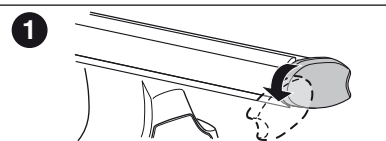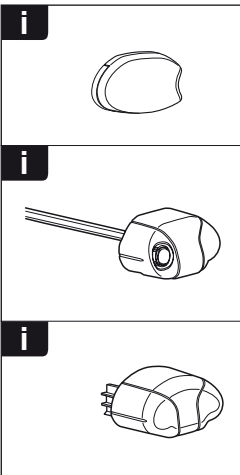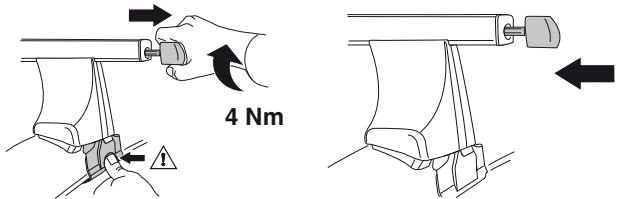


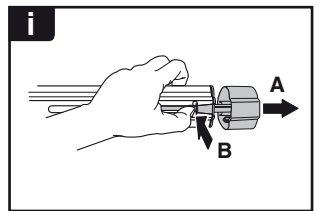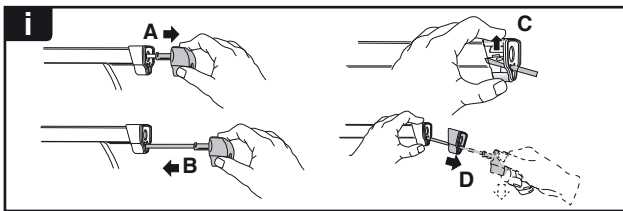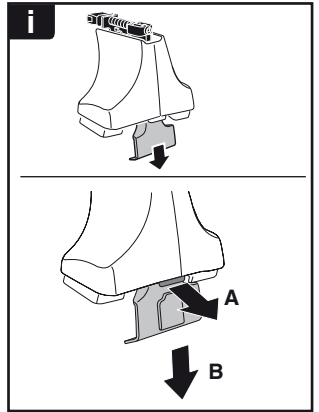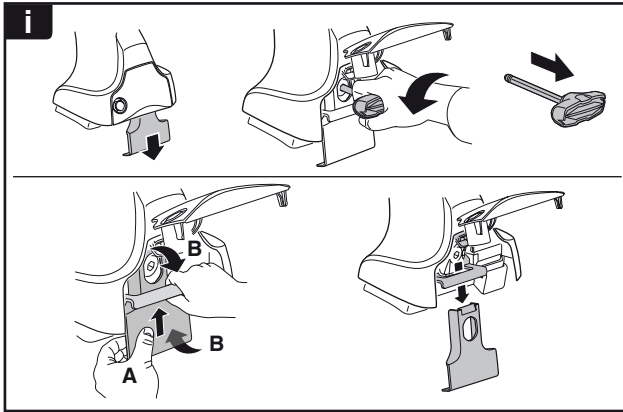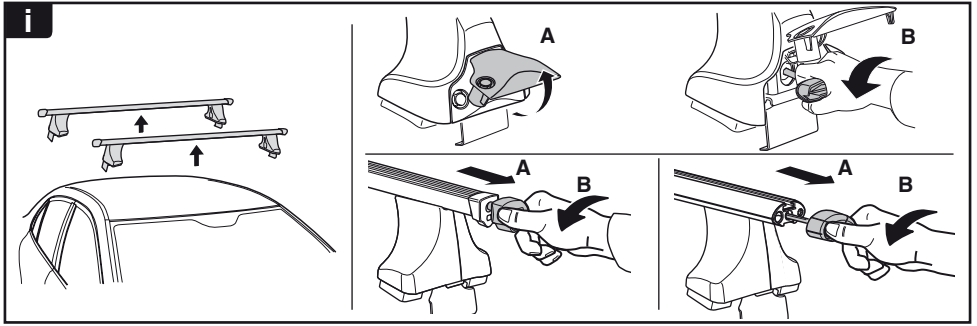






**THULE**  
SWEDEN  
**ONE  
KEY  
SYSTEM**



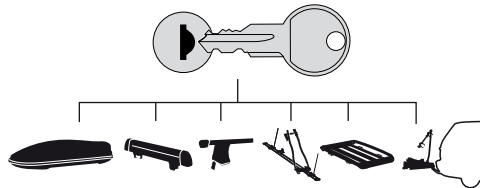



- 544 (x4)
- 596 (x6)
- 588 (x8)
- NA 510 (x10)
- EUR 452 (x12)
- ASIA

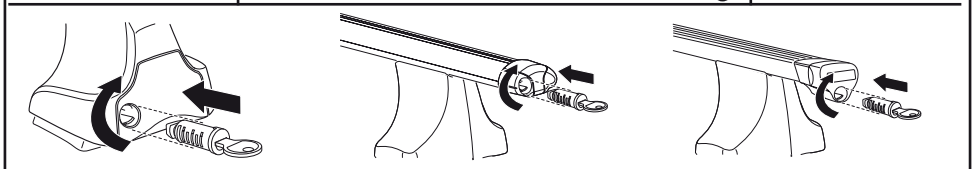



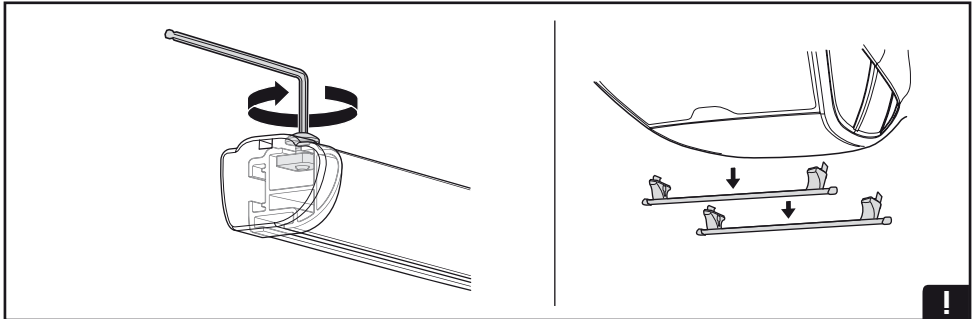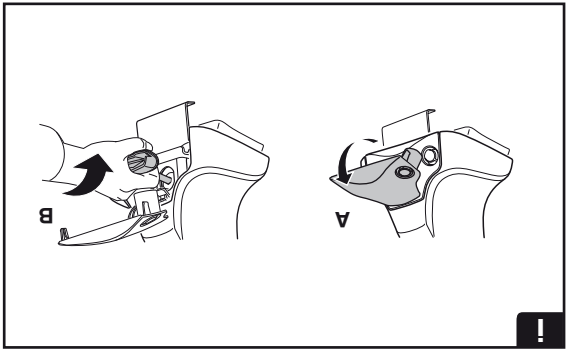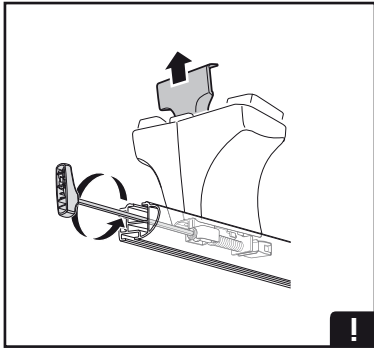
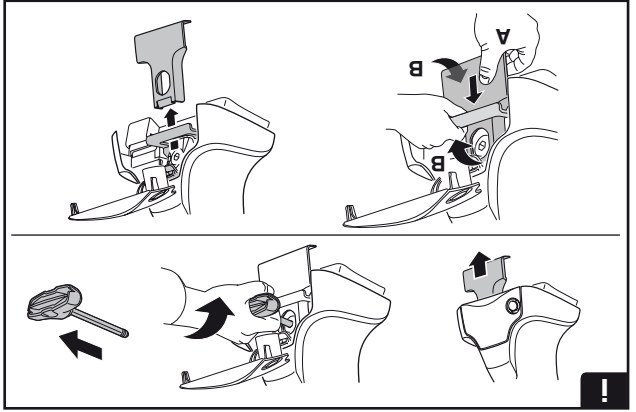
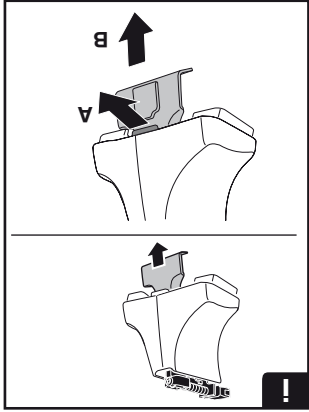


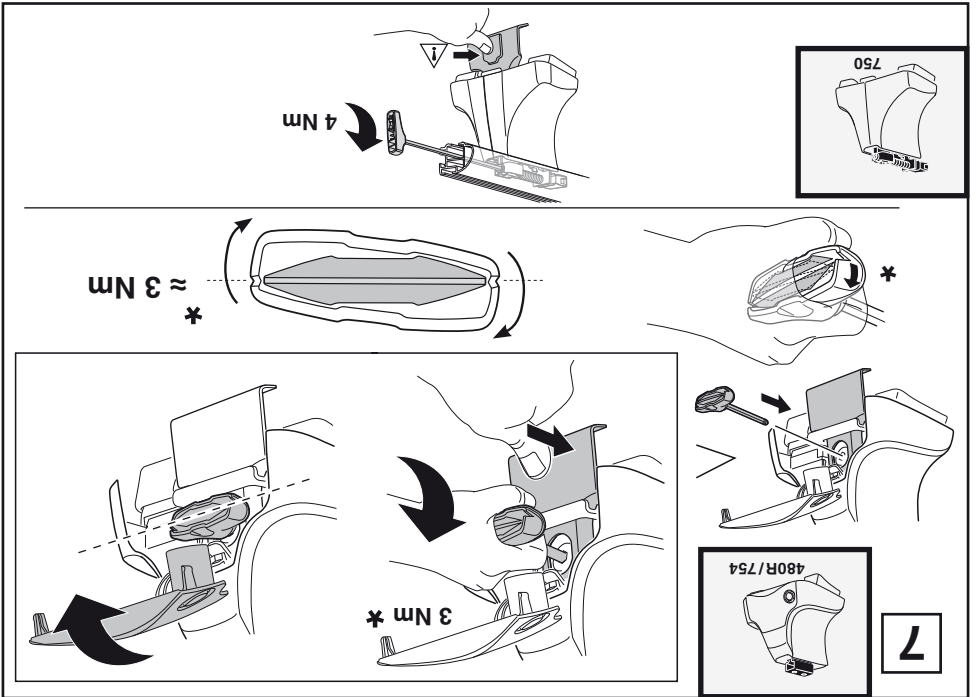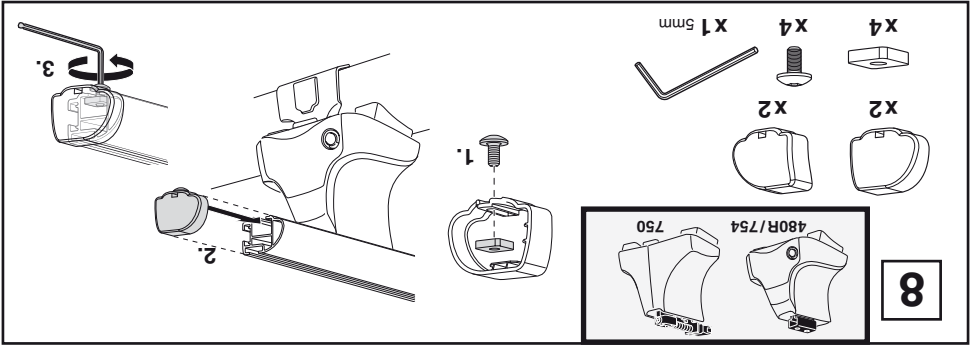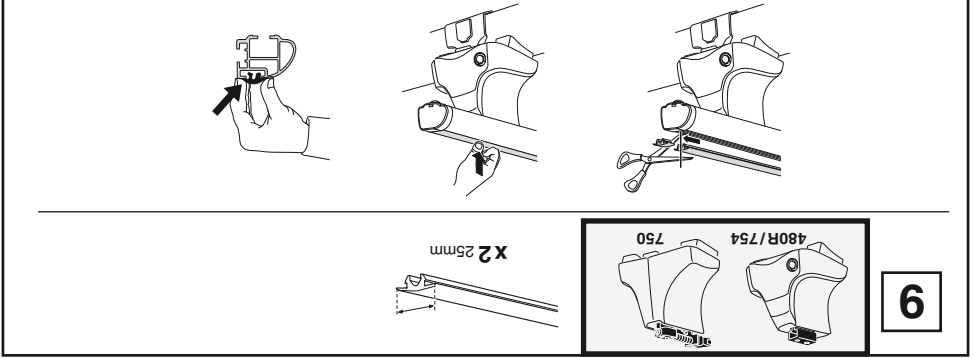

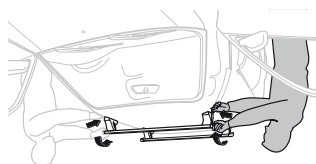






















GB/US Tighen alternativ  
 D Die Schrauben abwechselnd  
 F Serrer alternativement chaque côté  
 NL Afwisselend aan de linker- en de  
 I rechterkant aandraaien  
 E Alternare il serraggio delle viti  
 PT Aperte alternadamente  
 S Dra åt växelvis  
 FIN Kierra vuorotellen  
 EST Pinguldage vaheldumisi  
 LAT Pīvelciēt pamēšus  
 LT Užskinkite pakaitomis  
 PL Śruby dokręcaj naprzemiennie  
 RU Затягивайте попеременно

CZ Pokrýtá bagazníka dokręcaj  
 SK Dotahujú striedavo  
 SLO Privijajte izmenično.  
 HR Najzamenično zategnite  
 HU Egymástól fűggetlenül  
 GR Zφήγγετε εναλλάξ  
 TR Dönüşümlü sıkın  
 中文 交替拧紧  
 한국어 번갈아 가며 조이십시오.  
 日本語 交互に締め付けてください。  
 Կրկինվարժել

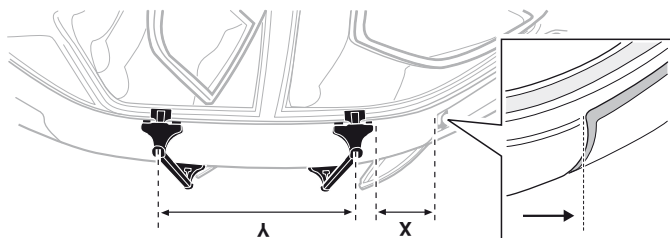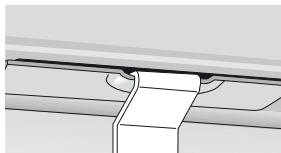
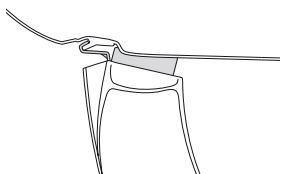





CITROËN Berlingo, 3-dr Van, 97-02, 03-08	770 mm	600 mm	30 3/8"	23 5/8"
CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06	320 mm	700 mm	12 5/8"	27 1/2"
PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08	770 mm	600 mm	30 3/8"	23 5/8"
PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08	770 mm	600 mm	30 3/8"	23 5/8"








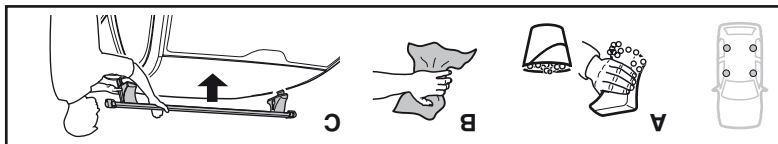


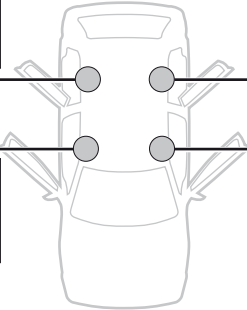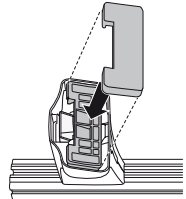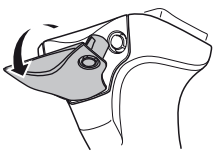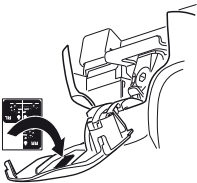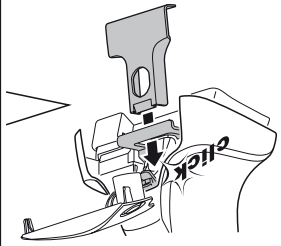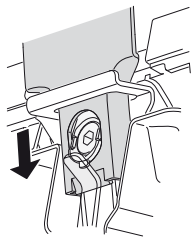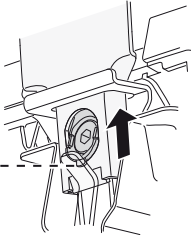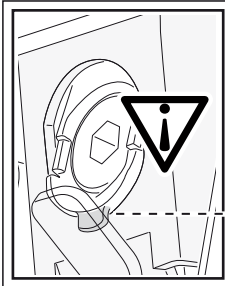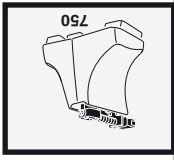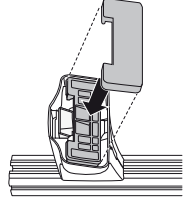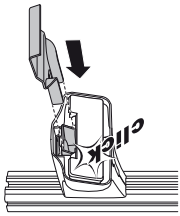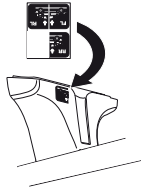

CITROËN Berlingo, 3-dr Van, 97-02, 03-08  
CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06  
PEUGEOT Partner, 3/4-5-dr Van, 97-02, 03-08  
PEUGEOT Ranch, 3/4-5-dr Van, 97-02, 03-08

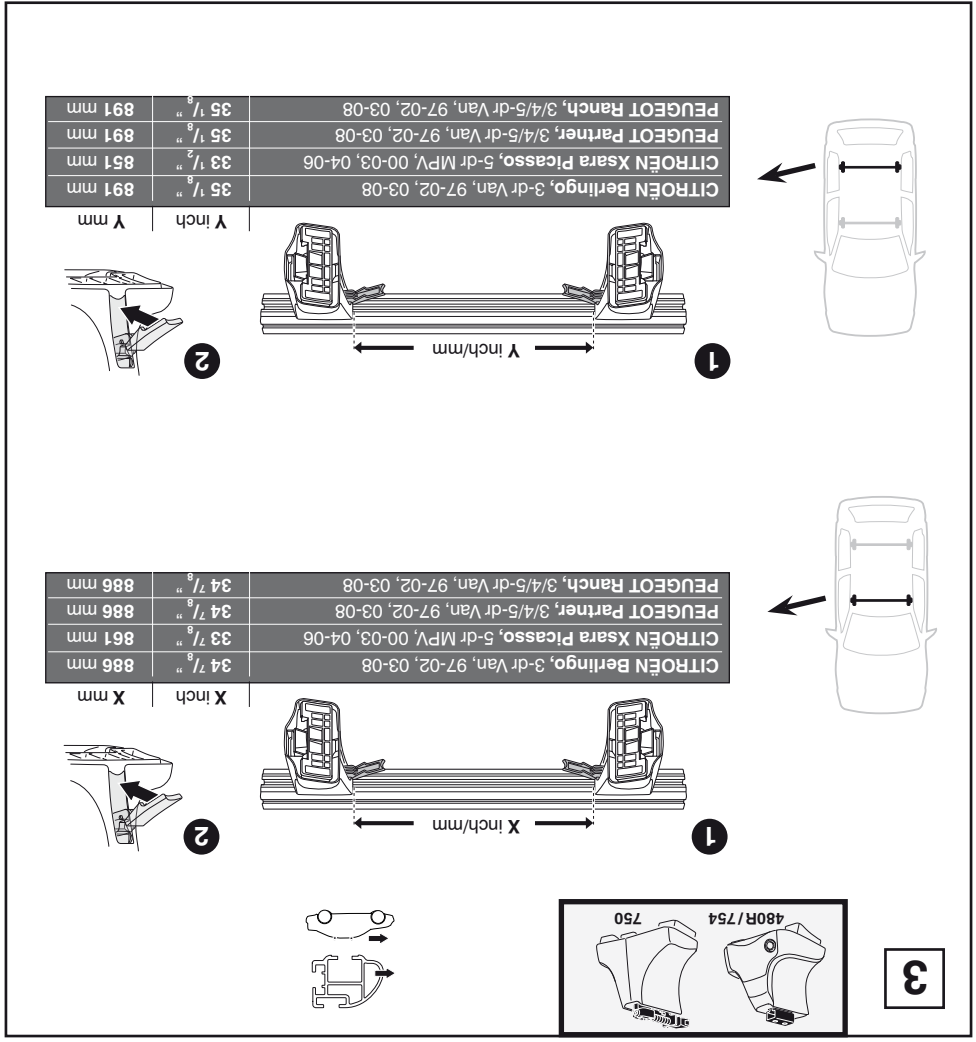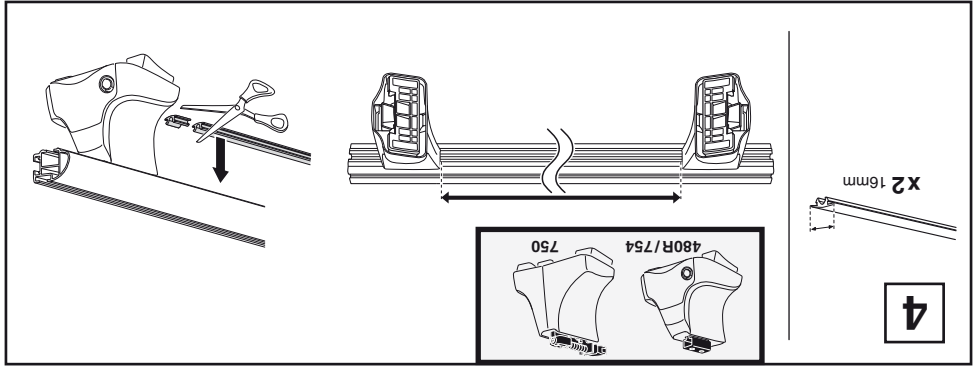

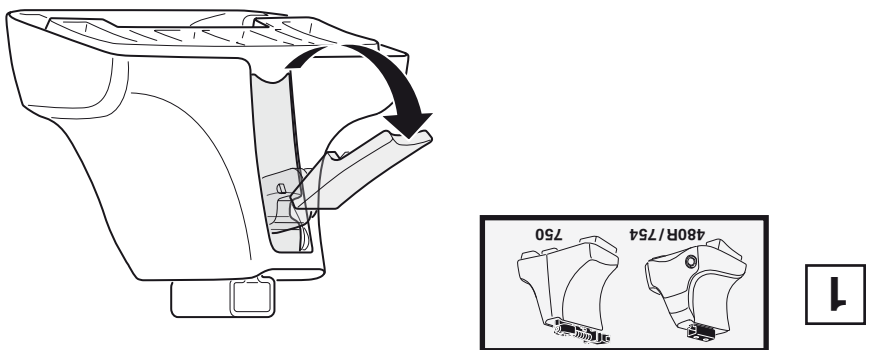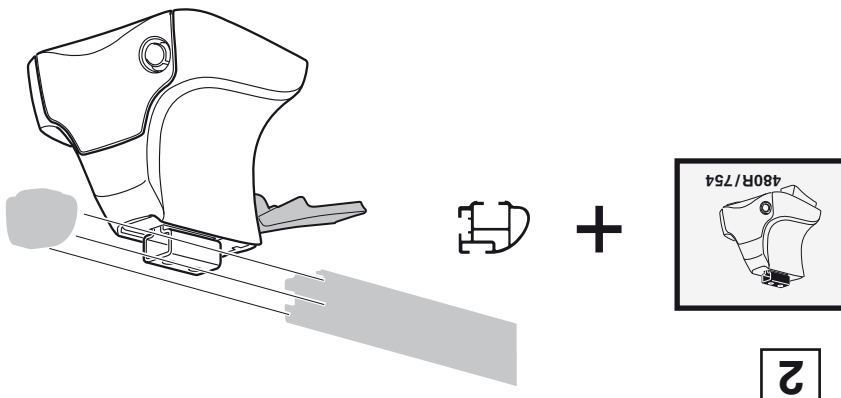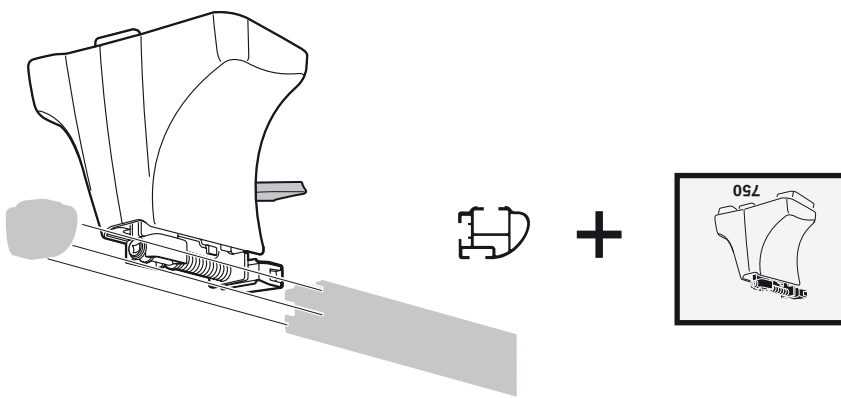

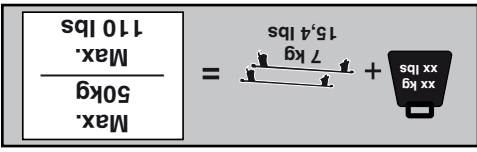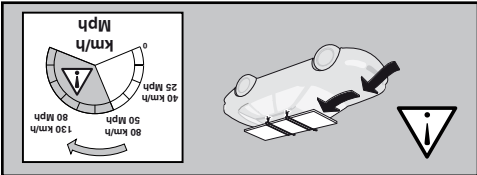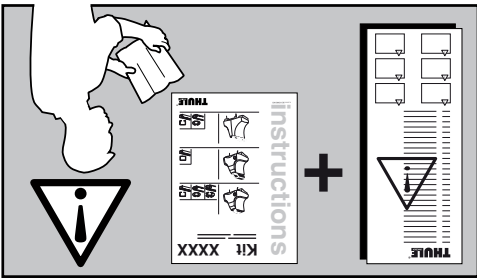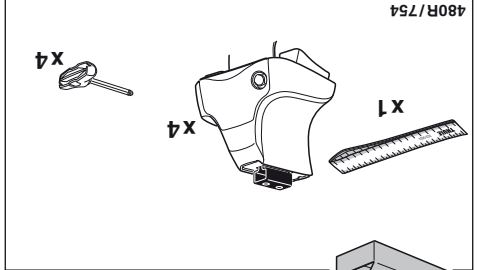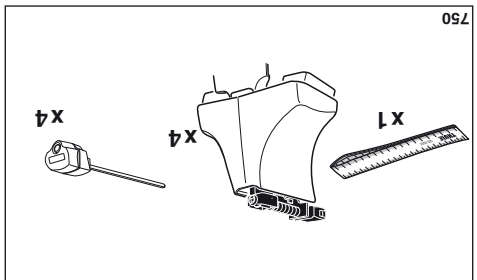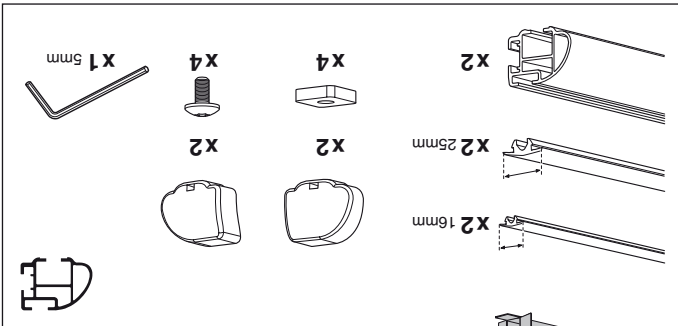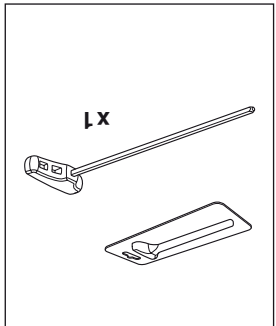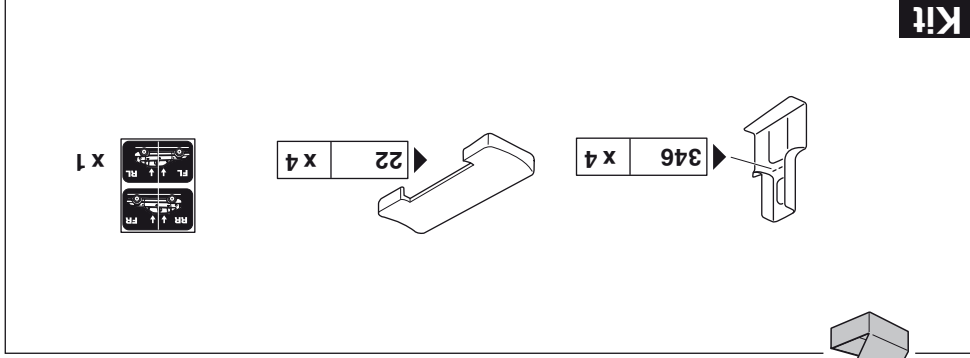


# instructions

2.20090713\_503-1184



ISO 11154-E

PROFESSIONAL


**THULE**  
SWEDEN®

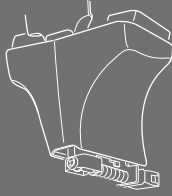

750

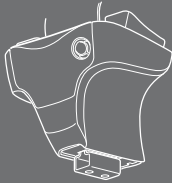

480R  
754



\* without sunroof

CITROËN Berlingo, 3-dr Van, 97-02, 03-08  
CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06\*  
PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08  
PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08

# Kit 1184