

Thule Rapid System Kit 1571

> Instructions

Audi A5, 2-dr Coupé, 07- / *08-





Audi S5, 2-dr Coupé, *08-

Audi A5 Sportback, 5-dr Hatchback, 09- / *10-

Audi S5 Sportback, 5-dr Hatchback, *10-

Without glass roof

*North America

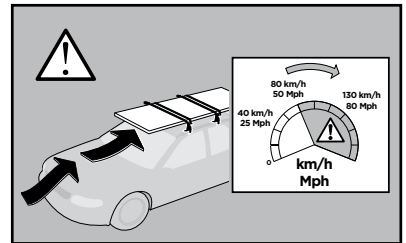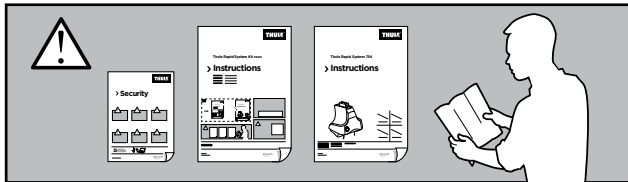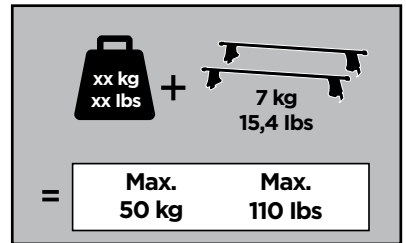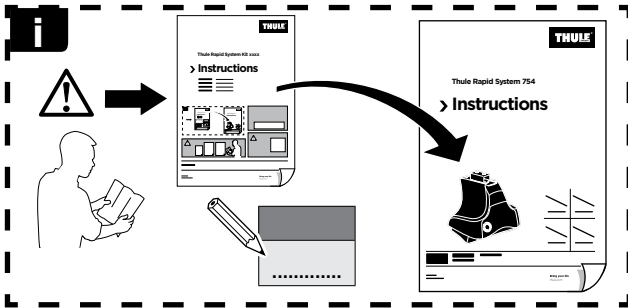


ISO 11154-E

141571

C.20120524
519-1571-03



Bring your life

thule.com

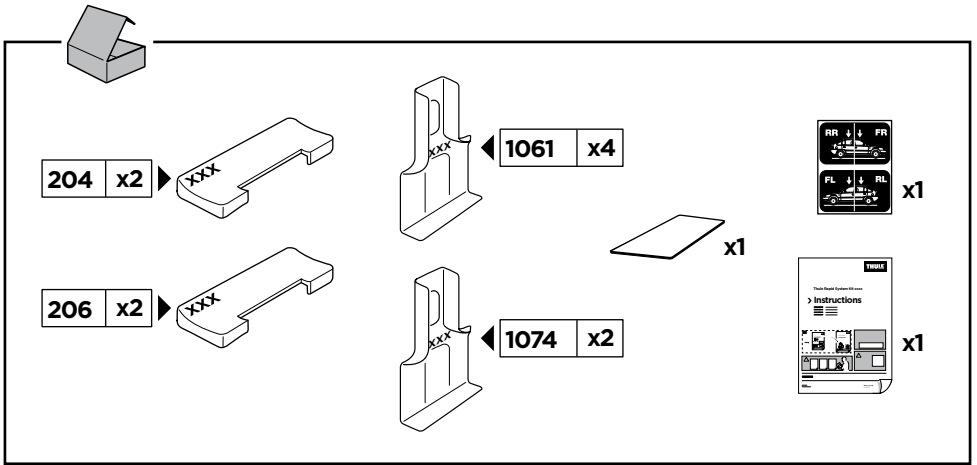



1

	X (scale)	X (mm)	X (inch)
Audi A5 , 2-dr Coupé, 07- / *08-	39	1041	41"
Audi S5 , 2-dr Coupé, *08-	39	1041	41"
Audi A5 Sportback , 5-dr Hatchback, 09- / *10-	39	1041	41"
Audi S5 Sportback , 5-dr Hatchback, *10-	39	1041	41"

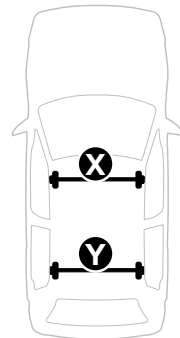
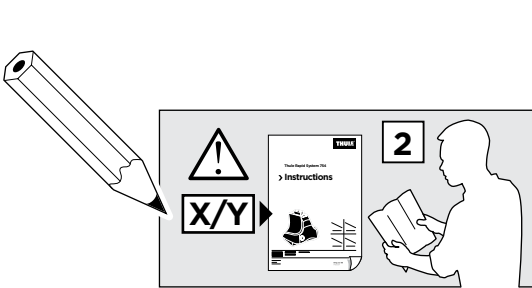


	Y (scale)	Y (mm)	Y (inch)
Audi A5 , 2-dr Coupé, 07- / *08-	36	1011	39 3/4"
Audi S5 , 2-dr Coupé, *08-	36	1011	39 3/4"
Audi A5 Sportback , 5-dr Hatchback, 09- / *10-	37	1021	40 1/4"
Audi S5 Sportback , 5-dr Hatchback, *10-	37	1021	40 1/4"



2

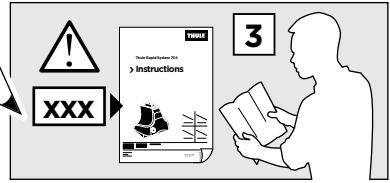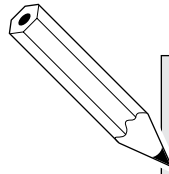



Audi A5, 2-dr Coupé, 07- / *08-
Audi S5, 2-dr Coupé, *08-

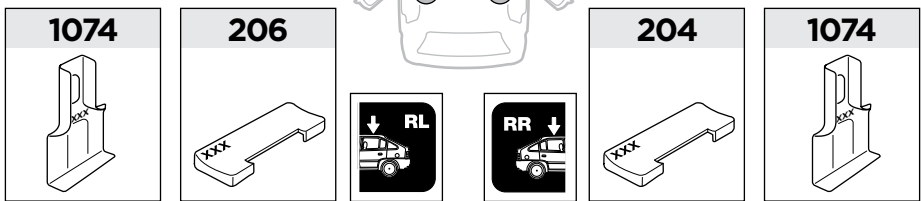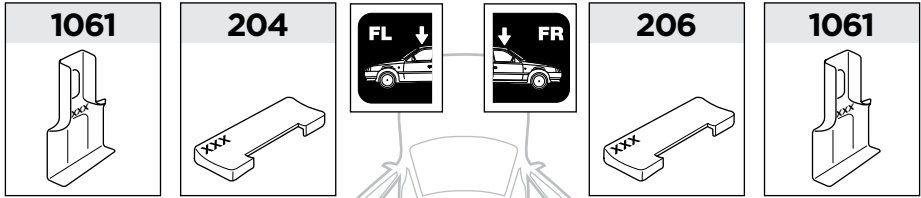

Audi A5 Sportback, 5-dr Hatchback, 09- / *10-
Audi S5 Sportback, 5-dr Hatchback, *10-

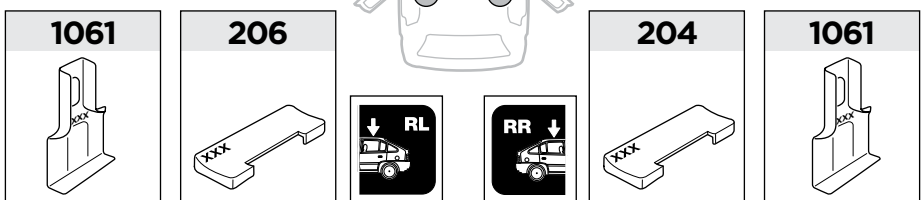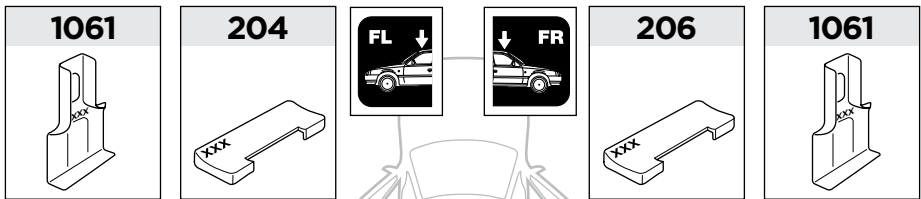

3

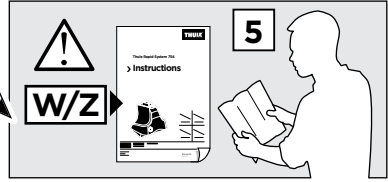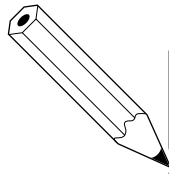

	W (mm)	Z (mm)	W (inch)	Z (inch)
Audi A5, 2-dr Coupé, 07- / *08-	180	685	7 1/8"	27"
Audi S5, 2-dr Coupé, *08-	180	685	7 1/8"	27"
Audi A5 Sportback, 5-dr Hatchback, 09- / *10-	140	730	5 1/2"	28 3/4"
Audi S5 Sportback, 5-dr Hatchback, *10-	140	730	5 1/2"	28 3/4"

