





Thule Rapid System Kit 1591

> Instructions

AUDI A6, 4-dr Sedan, 04-10 / *05-11

AUDI S6, 4-dr Sedan, *05-11

*North America

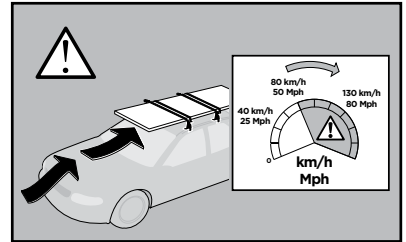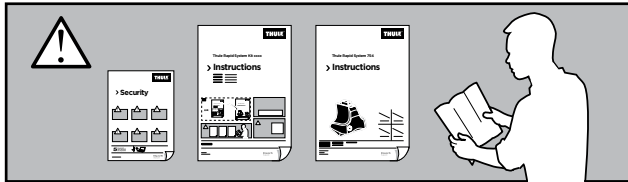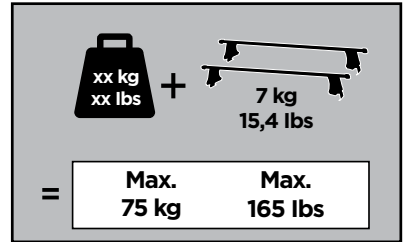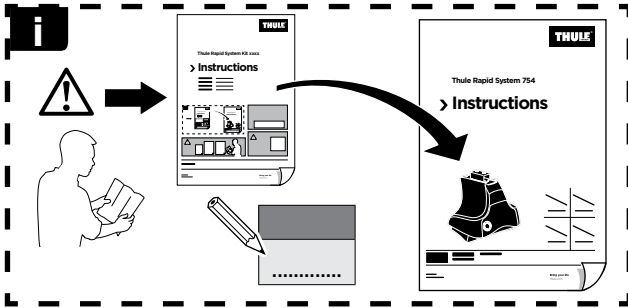

ISO 11154-E

141591


C.20120524
519-1591-02

Bring your life

thule.com



29 x1



30 x1

259 x1

260 x1




911 x2



1090 x2





x1



x1

1

	X (scale)	X (mm)	X (inch)
AUDI A6 , 4-dr Sedan, 04-10 / *05-11	36	1011	39 ³ / ₄
AUDI S6 , 4-dr Sedan, *05-11	36	1011	39 ³ / ₄

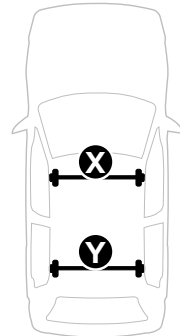
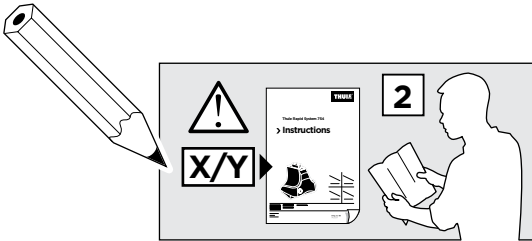



	Y (scale)	Y (mm)	Y (inch)
AUDI A6 , 4-dr Sedan, 04-10 / *05-11	36	1011	39 ³ / ₄
AUDI S6 , 4-dr Sedan, *05-11	36	1011	39 ³ / ₄

2

AUDI A6, 4-dr Sedan, 04-10 / *05-11

AUDI S6, 4-dr Sedan, *05-11

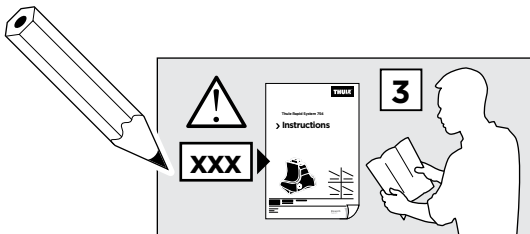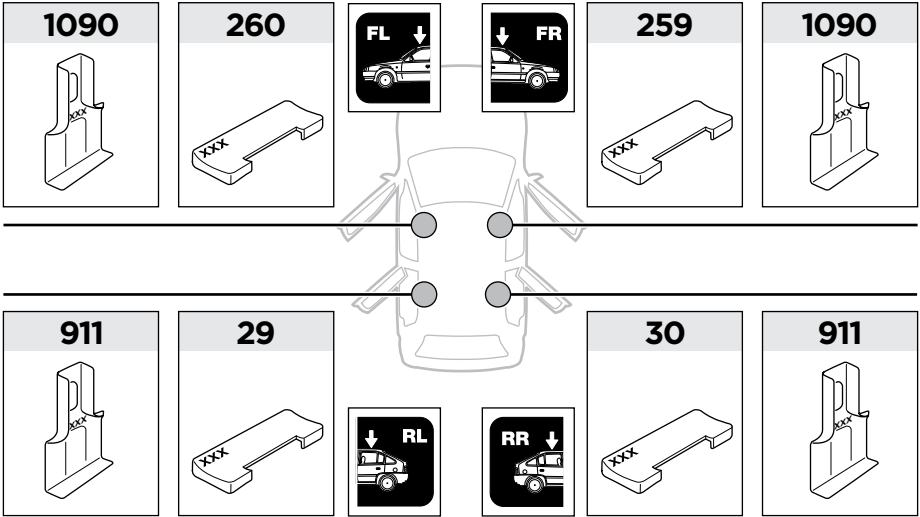

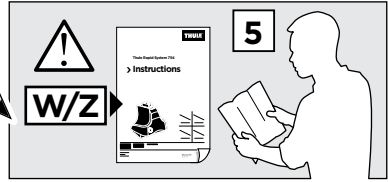3

	W (mm)	Z (mm)	W (inch)	Z (inch)
AUDI A6 , 4-dr Sedan, 04-10 / *05-11	215	790	8 1/2	31 1/8
AUDI S6 , 4-dr Sedan, *05-11	215	790	8 1/2	31 1/8

